



# ADesignStudio.

## **GREENWAY CRACKLE W1 / W2**

### INSTALLATION NOTES

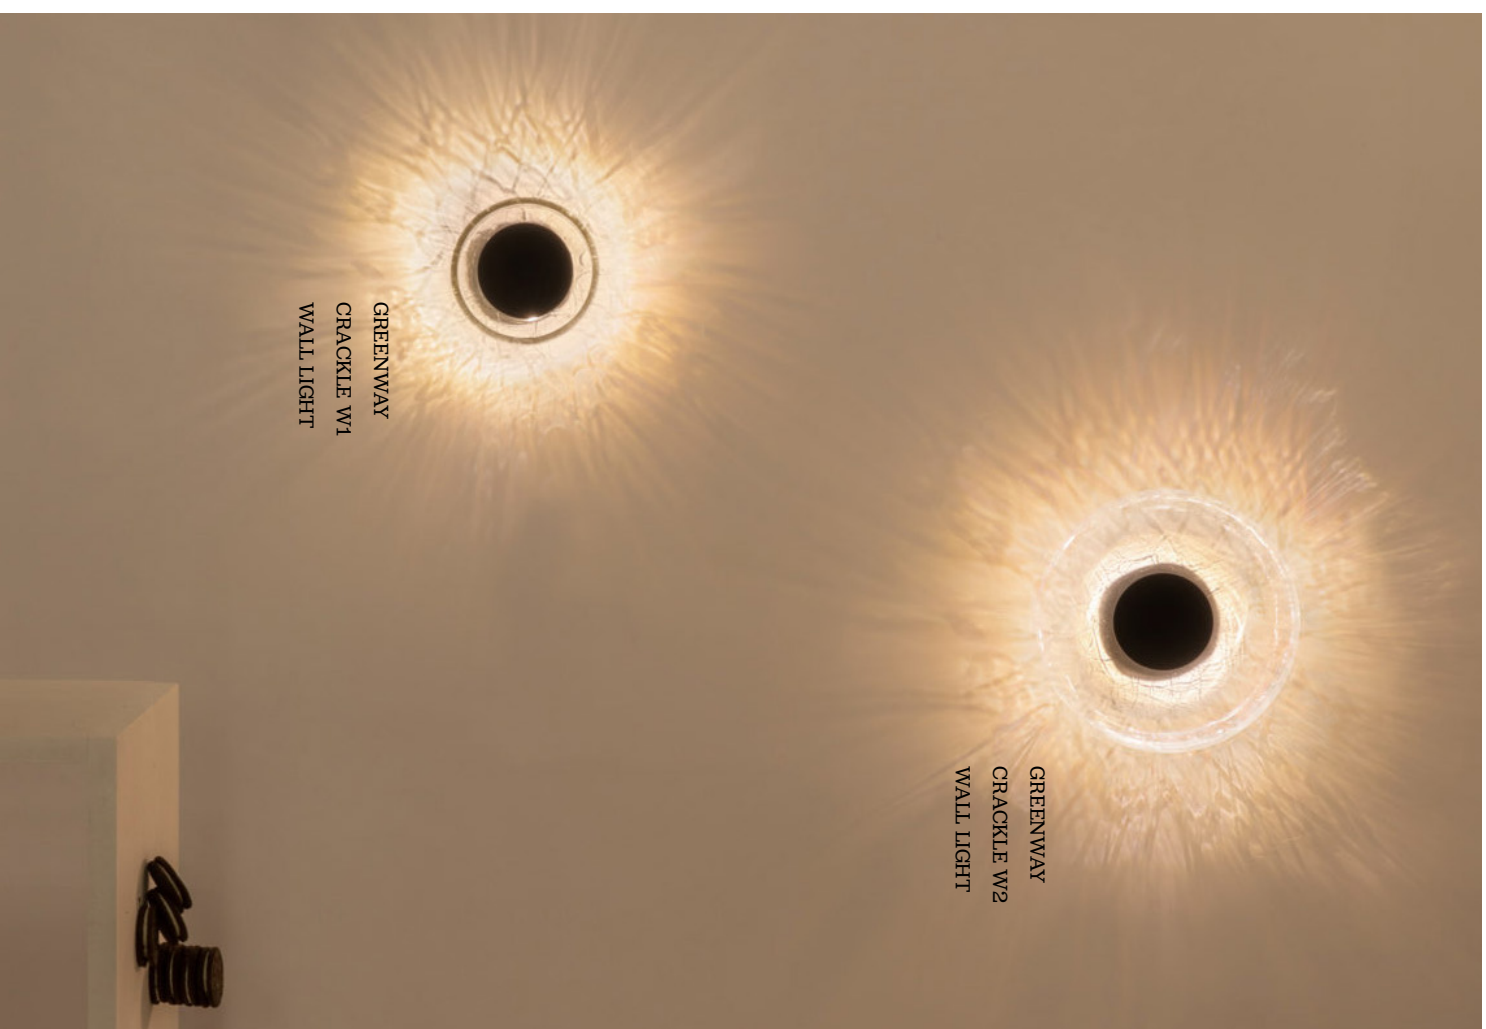

Sydney, Australia  
studio@adesignstudio.com.au

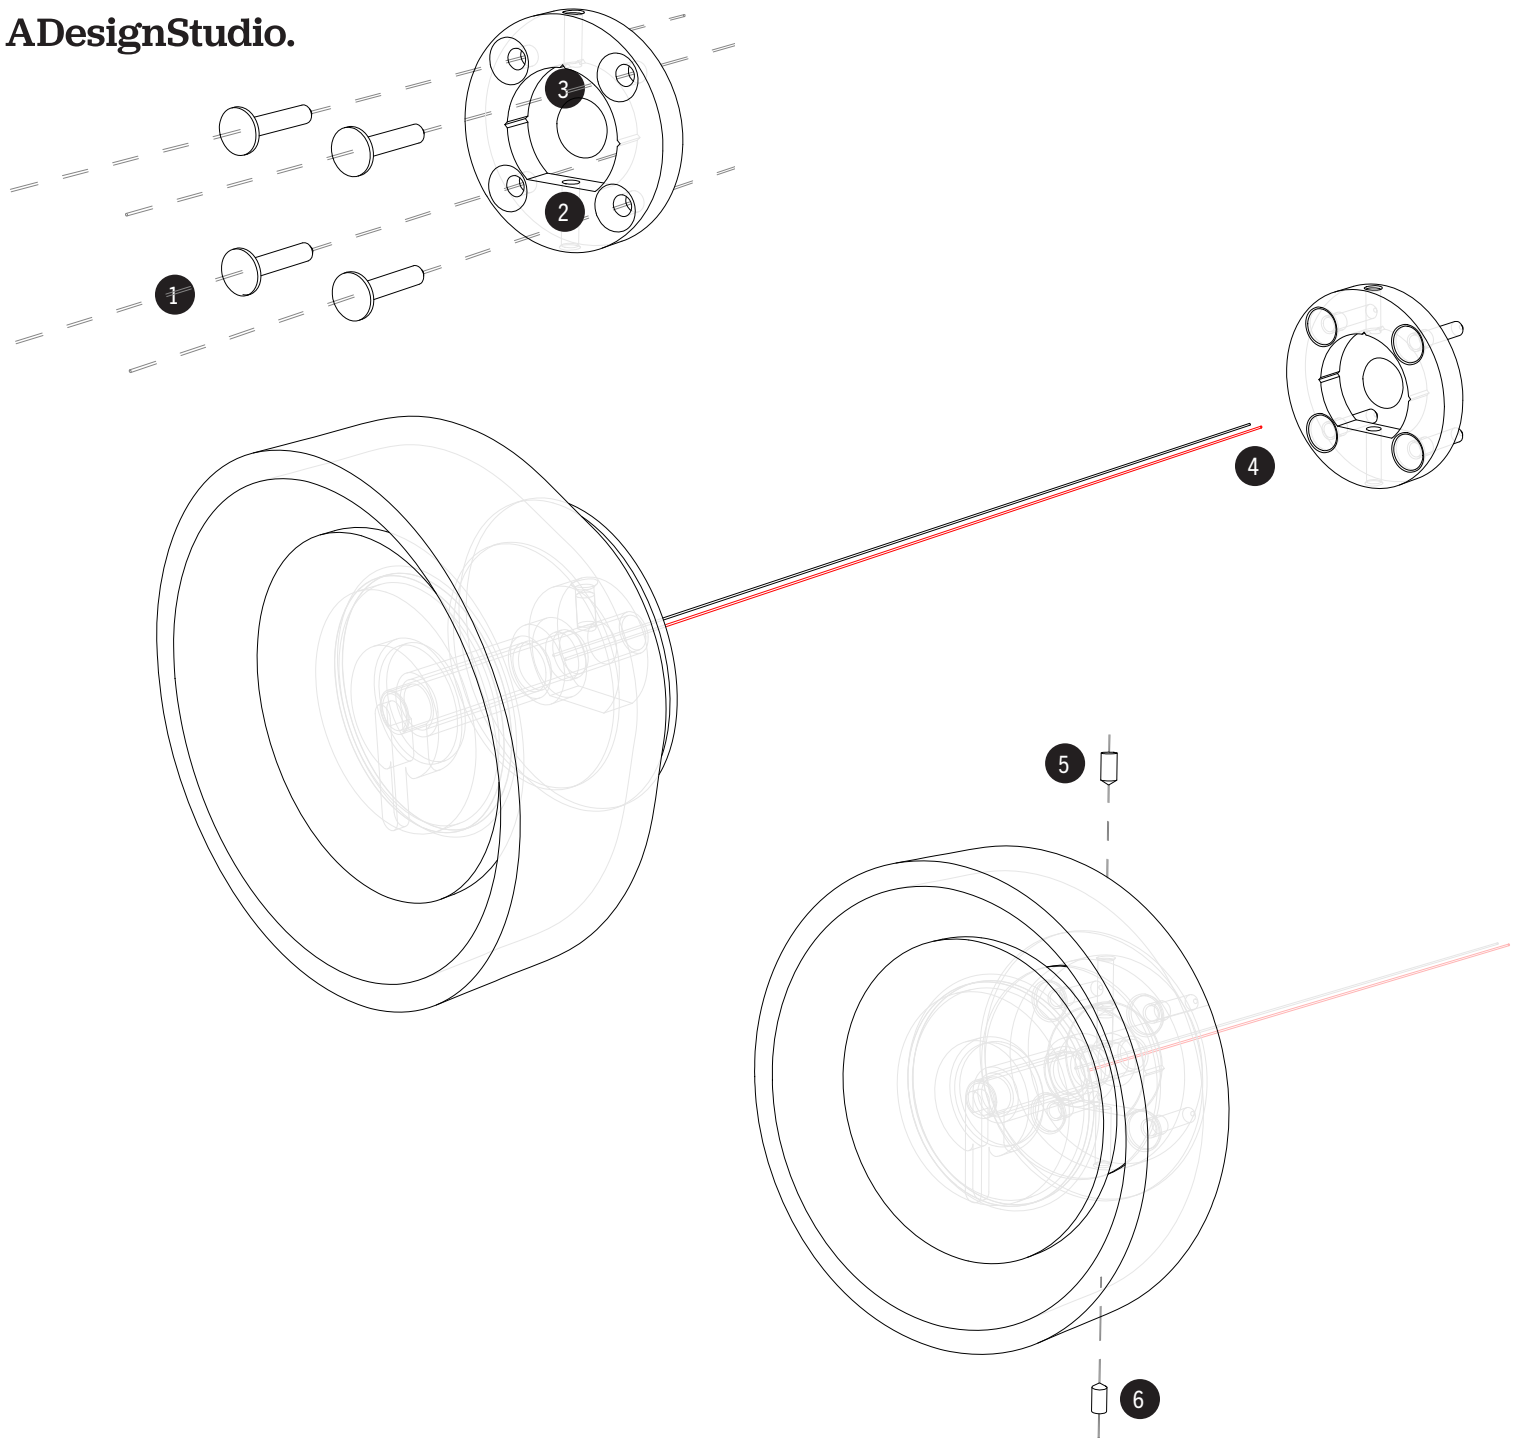

## ATTENTION!

The safety of this fitting can only be guaranteed if these instructions are observed, during both installation and use. Please retain these instructions.

## REMARKS

- When installing the system, make sure all current national regulations relating to installation are observed.
- When installing and / or working on the fitting, ensure that the power supply has been switched off.
- The fitting may in no way be modified or tampered with. Any modification may compromise safety, causing the appliance to become dangerous. ADesignStudio declines all responsibility for products that are modified.
- This appliance must be connected to an efficient grounding system in order to work safely and correctly.
- Contact a qualified electrician for installation.

## ASSEMBLY INSTRUCTIONS

Caution: to avoid possible electrical shock, make certain electricity is shut off at main panel before wiring.

Do not connect 210-240V directly into the light fitting.

1. Install driver remotely in accessible, dry and ventilated location.
2. Screw fix mounting bracket to the wall. Screw and silicone the mounting bracket for IP fitting.
3. Flat section of mounting bracket to positioned on the bottom as shown, and parallel to the floor.
3. Drill 14mm diameter hole in wall. Rough in cabling from remote driver location to fitting /s (if not already done). Wire as per remote LED driver to manufacturer recommendations.
4. Make the electrical connections respecting the poles. For IP fitting wire connections are to be water proof.
5. Fasten the body of the fitting to the wall by holding the fitting in place and firstly tightening the top grub screw to level and secure the luminaire
6. And use the bottom grub to fix the luminaire in place.

## CLEANING INSTRUCTIONS

Warning: Do not use alcohol or other solvents.

Use only a soft cloth to clean the luminaire.