

ADesignStudio.

INSTALLATION NOTES

COAST & COVE W1




Coast




Cove


Sydney, Australia
studio@adesignstudio.com.au

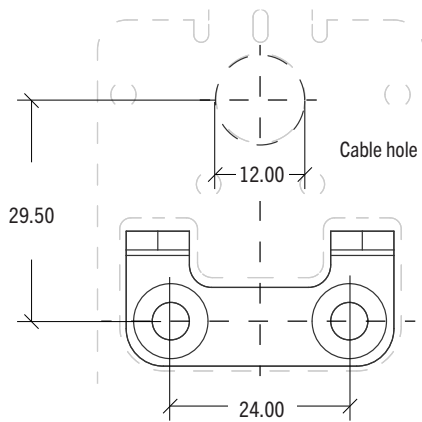


2 Mounting Orientation and Cable Hole Position

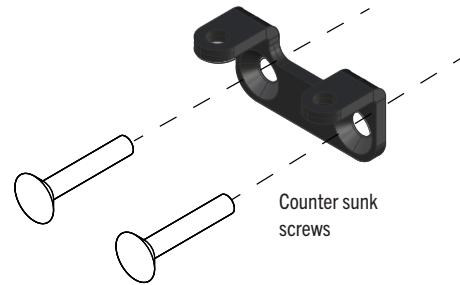

3 Fix Mounting Plate and drill cable hole

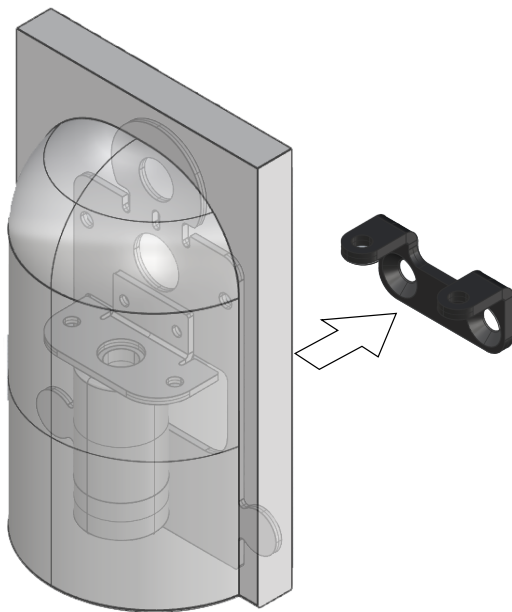

5 Slot Shade Over Mounting Plate

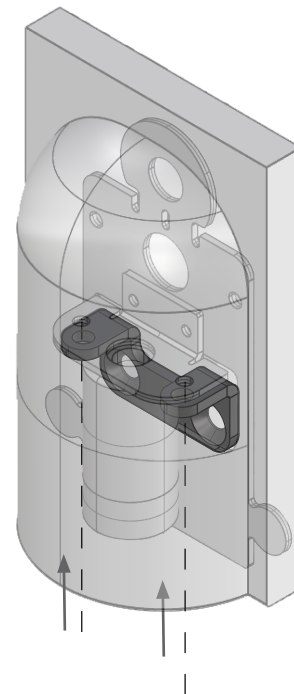

6 Lock Shade in place

ATTENTION!

The safety of this fitting can only be guaranteed if these instructions are observed, during both installation and use. Please retain these instructions.

REMARKS

- When installing the system, make sure all current national regulations relating to installation are observed.
- When installing and / or working on the fitting, ensure that the power supply has been switched off.
- The fitting may in no way be modified or tampered with. Any modification may compromise safety, causing the appliance to become dangerous. ADesignStudio declines all responsibility for products that are modified.
- This appliance must be connected to an efficient grounding system in order to work safely and correctly.
- Contact a qualified electrician for installation.

CLEANING INSTRUCTIONS

Warning: Do not use alcohol or other solvents. Use only a soft cloth to clean the appliance.

ASSEMBLY INSTRUCTIONS

Caution: to avoid possible electrical shock, make certain electricity is shut off at main panel before wiring.

1. Driver to be mounted remotely in a dry, ventilated and accessible location.
2. Review and follow mounting orientation and cable hole position as seen above.
3. Screw Mounting Plate to wall and drill hole.
4. Make low voltage connection from remote driver to LED. Ensure correct polarities.
5. Slot Shade over Mounting Plate.
6. Fasten Stainless Steel screws upwards from beneath the shade to lock the fitting in place.